



This device must be activated in order to function properly. There are two ways to activate your CPS Pulse clicker.

- **Activate it using CPSOnline.**
- **Activate it using your Class Management System (BlackBoard, WebCT, Angel).**

Your instructor will give you information about the preferred method of activation for your class.

## The CPS Pulse Keys

You will use your CPS Pulse clicker as you do your other handheld devices that have keypads. Key touches are described here as *presses*. Several keys have two types of key presses – *press* and *press and hold*.

### The Screen

ICON	NAME	DESCRIPTION
8888	Channel #	Displays Channel # or homework bin, depending on mode.
OK	Enter/Send	Animated during transmission. <b>OK</b> when transmission acknowledged.
✓/✗	Correct/Incorrect	Indicates correct or incorrect answer. Teacher must activate this option.
↑	RF Activity Indicators	Up arrow flashes for each transmit, down arrow flashes for each receive.
A 1 B 2 C 3	Text Entry Mode	Indicates which of the text entry modes - alpha, numeric, SMS - is currently in use.
📄	Self-Paced Mode	Indicates that the keypad is operating in Self-Paced Mode.
🔋	Battery Status	Indicates the current battery voltage from full to low to very low. Very low will flash.

### Menu

Press to access the Main Menu. Press the Navigation keys to scroll the Menu. Press the Enter key to select a Menu item.

Menu Item	Description
Join	Press the <b>Enter</b> key. Type the <b>Join Code</b> for the Class.
Channel	Displays the Channel # in the upper left corner of the Screen.
Clicker #	Displays the clicker's assigned number.
Greeting	The Greeting displays when you turn on the Pulse. Press the <b>Enter</b> key, type your greeting, press the <b>Enter</b> key again to save it.
Contrast	Press the <b>Navigation</b> keys to adjust the contrast from low contrast (1) to high contrast (6).
Diagnostic	Displays the Pulse's Serial number, your Pulse type, the signal strength, and firmware version.

### Left Navigation

### Right Navigation

### Backspace

### Enter/Send

### Alpha/Numeric/SMS Entry

### Symbol

Press key multiple times to cycle through Symbols Table.

### Plus/Minus

### Symbols Table

. Period	y
, Comma	= Equal
/ Division	> Greater than
* Multiplication	< Less than
+ Plus	≥ Greater than or equal
- Minus	≤ Less than or equal
Space	Pipe
( Open Parenthesis	√ Square Root
) Close Parenthesis	^ Caret
x	@ Email

### Switch text entry mode

Press key multiple times to cycle through the text entry modes. As you change modes, they are pictured on the Screen.

### Power

Press to power on your CPS Pulse.  
Press and hold for 2 seconds to power down your CPS Pulse.

### Jump/Search

Press key to **jump** to a question in a self-paced test or homework assignment.  
Press and hold key to search for the next unanswered question.