

Epson ELPDC05 High Resolution Document Imager

For further assistance, call the HelpDesk at x6-8555

The user manual for this document camera is available at:

http://www.calvin.edu/it/services/smartclassrooms/documents/EpsonELPDC05_User_Manual.pdf



Using the document camera:

- 1) Turn on the projector (using the projector's remote).
- 2) Turn on the document camera. After a moment, the upper lamps turn on.
- 3) Place your presentation material on the Stage.
- 4) Use the Source button(s) -- such as Computer 2 or Video 2 -- on the *projector's* remote to locate the correct source for the document camera.
- 5) Assuming the projector is on and you've located the correct source for the document camera, your presentation material will appear on the screen. Some rooms utilize what's called an "A/B Switch"; if your room has one of these, be sure that it's in the correct position to display images from the document camera (vs. a laptop or another item).

You can use the LAMP button (on the document camera) to move through the sequence of having the upper lamps on, just the base lamp on, or all of the lamps turned off. This is helpful, for example, if you want to just have the base lamp on in order to project a transparency. A similar effect can be achieved using the UPPER LAMP button and the BASE LAMP button on the document camera's remote control unit.